



iPhone 5s Home Button Assembly Replacement

Prereq to remove the home button assembly in an iPhone 5s.

Written By: Sam Lionheart



INTRODUCTION

Prerequisite to replace the home button assembly in your iPhone 5s.

Please note that only the phone's original home button assembly will be capable of using the Touch ID functionality. **Installing a new home button will only restore ordinary home button functions, not the Touch ID features.**



TOOLS:

- [P2 Pentalobe Screwdriver iPhone](#) (1)
- [iSclack](#) (1)
- [iFixit Opening Tools](#) (1)
- [Suction Handle](#) (1)
- [Spudger](#) (1)
- [Phillips #000 Screwdriver](#) (1)
- [Tweezers](#) (1)



PARTS:


- [iPhone 5s Home Button Assembly](#) (1)

Step 1 — Home Button Assembly



- Unscrew the single captive Phillips #000 screw securing the home button cable.
- ☑ The captive screw is fastened to the home button cable by a spring contact backing. During reassembly, ensure the contact is in the correct orientation—on the side of the screw nearest the LCD.
- ☑ If your replacement part does not have this captive screw and spring contact, you will need to transfer them to the new cable.

Step 2

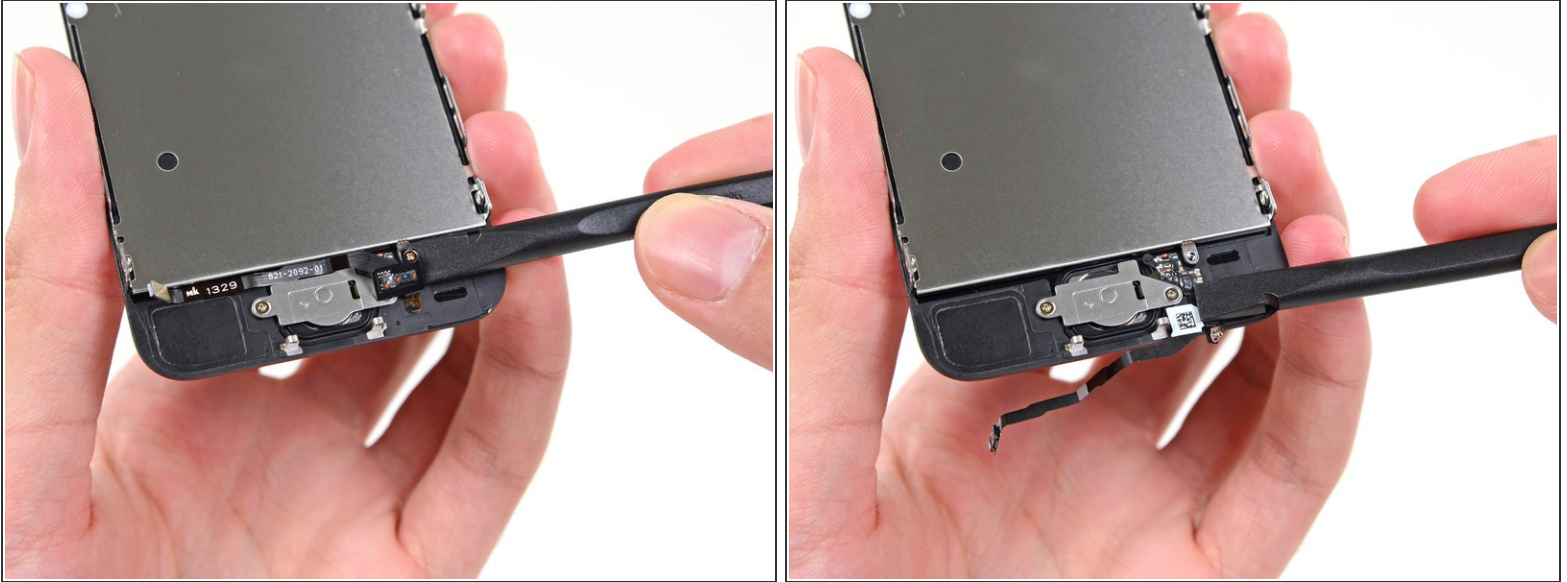

- Fold the home button cable down, out of the way of the home button bracket.

Step 3




- Remove the two 1.4 mm Phillips #000 screws from the home button bracket.

Step 4




- Remove the home button bracket from the display assembly.


Step 5

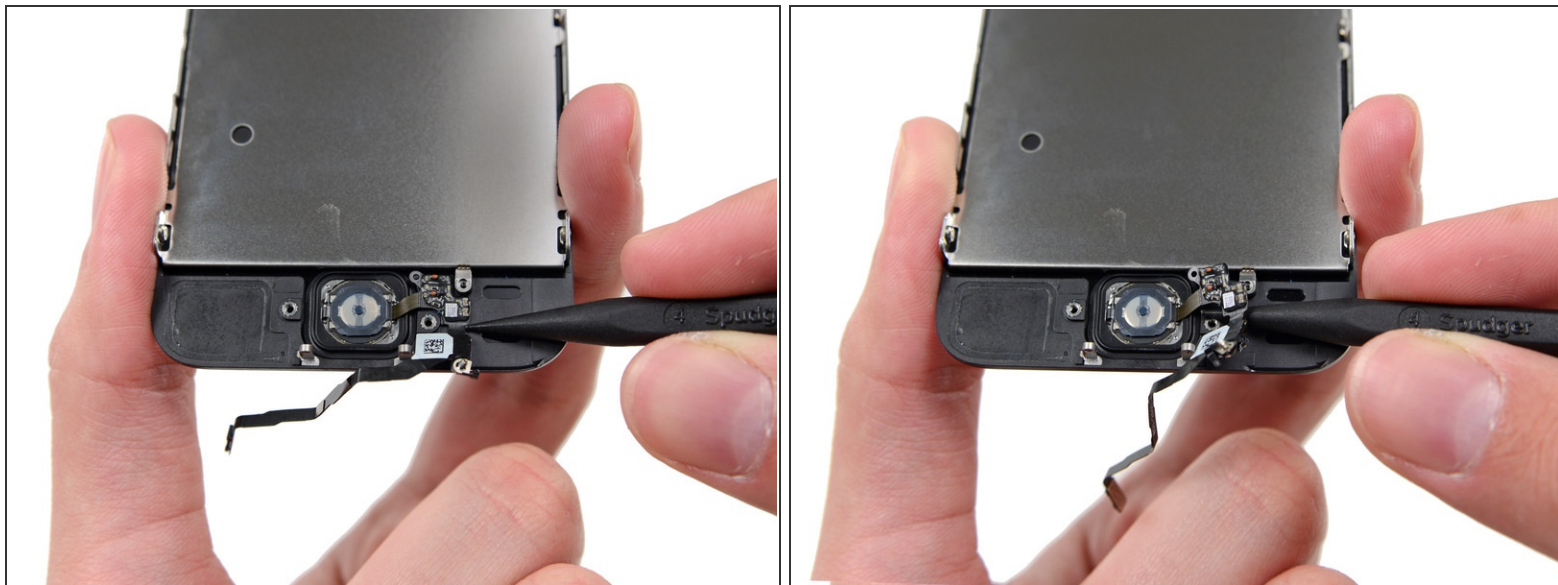


- Wedge the the tip of a spudger underneath the home button cable assembly.




 The home button cable is affixed by mild adhesive.

- Gently work the spudger underneath the cable to separate the home button cable from the front panel assembly.


 Do **not** remove the home button yet, as it is still attached to the front panel assembly.

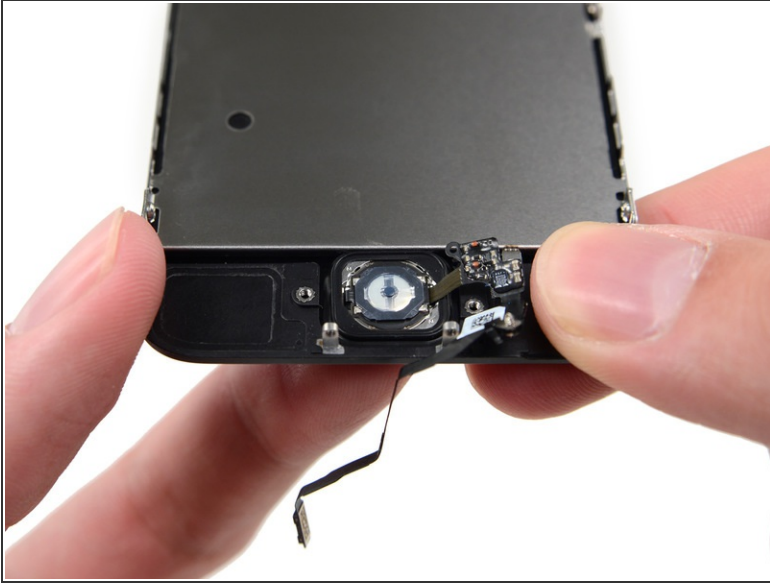Step 6



-  If necessary, remove the tape over the home button on the front side of your cracked front panel assembly.
- Gently push the top left corner of the home button up away from the front panel.
-  Do **not** push the home button all the way through—you only need to get a corner free, so that you can pry it free with a spudger.
-  This membrane is very thin. If you feel like you're going to tear the button, apply heat and try again.

Step 7

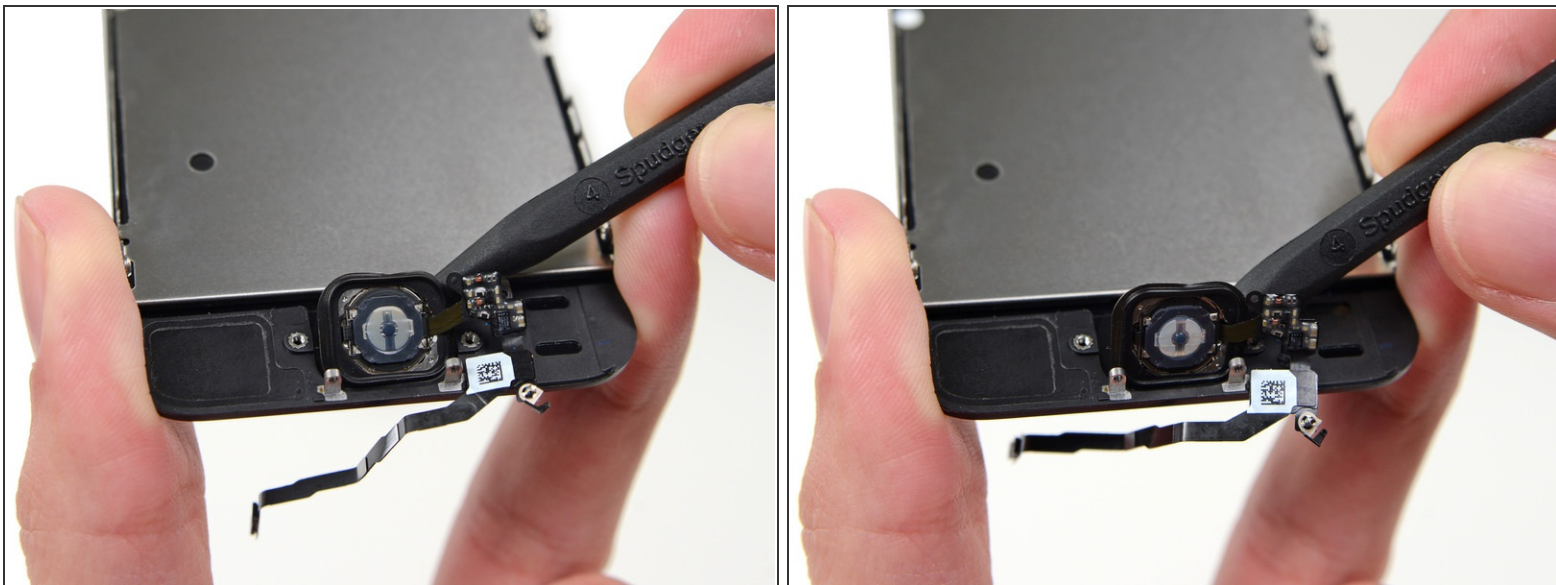

- Peel the home button the rest of the way off of the display by prying gently with a spudger.

Step 8



- Remove the home button assembly from the front panel.

To reassemble your device, follow these instructions in reverse order.

